


Multipoint^{EZ}


User Guide

RC-MPEZ-8-IC

Multipoint^{EZ} User Guide

Operation Instructions:

Simply press the on/off button for that zone to operate. 

The zone on/off state is shown by the green LED beside the on/off button. 

Full airflow should be available from ten seconds to two minutes after switching the zone on, depending on the type of damper motor being used. To allocate a RC-MP1-IC to a zone, select the dipswitch(s) to add up to the corresponding zone number.



RC-MP-1-IC




RC-MP-5-IC



RC-MP-6-IC



RC-MP-7-IC

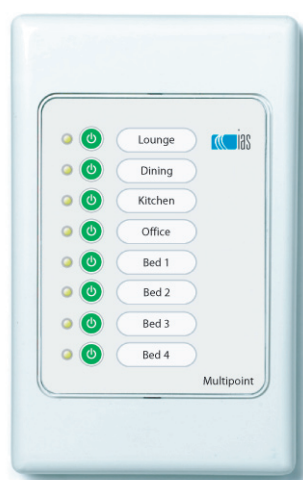

RC-MP-8-IC